

40 C.F.R. § 60.2918

What happens during periods of startup, shutdown, and malfunction?

The emission limitations and operating limits apply at all times except during OSWI unit startups, shutdowns, or malfunctions.

This document is only available to subscribers. Please log in or purchase access.

[Purchase Login](#)