

40 C.F.R. § 1039.710

How do I average emission credits?

- (a) Averaging is the exchange of emission credits among your engine families. You may average emission credits only within the same averaging set.
- (b) You may certify one or more engine families to an FEL above the applicable standard, subject to the FEL caps and other provisions in subpart B of this part, if you show in your application for certification that your projected balance of all emission-credit transactions in that model year is greater than or equal to zero.

This document is only available to subscribers. Please [log in](#) or [purchase access](#).

[Purchase Login](#)