

## 40 C.F.R. § 264.227

---

### Emergency repairs; contingency plans.

---

(a) A surface impoundment must be removed from service in accordance with paragraph (b) of this section when:

(1) The level of liquids in the impoundment suddenly drops and the drop is not known to be caused by changes in the flows into or out of the impoundment; or

(2) The dike leaks.

(b) When a surface impoundment must be removed from service as required by paragraph (a) of this section, the owner or operator must:

(1) Immediately shut off the flow or stop the addition of wastes into the impoundment;

This document is only available to subscribers. Please [log in](#) or [purchase access](#).

[Purchase Login](#)