

40 C.F.R. § 265.345

General operating requirements.

During start-up and shut-down of an incinerator, the owner or operator must not feed hazardous waste unless the incinerator is at steady state (normal) conditions of operation, including steady state operating temperature and air flow.

This document is only available to subscribers. Please log in or purchase access.

[Purchase Login](#)