

40 C.F.R. § 62.15270

How do I monitor the temperature of flue gases at the inlet of my particulate matter control device?

You must install, calibrate, maintain, and operate a device to continuously measure the temperature of the flue gas stream at the inlet of each particulate matter control device.

This document is only available to subscribers. Please log in or purchase access.

[Purchase Login](#)